


# GB TRKK 6620

## QUICK REFERENCE GUIDE

Please also carefully read the "Instructions for Use".

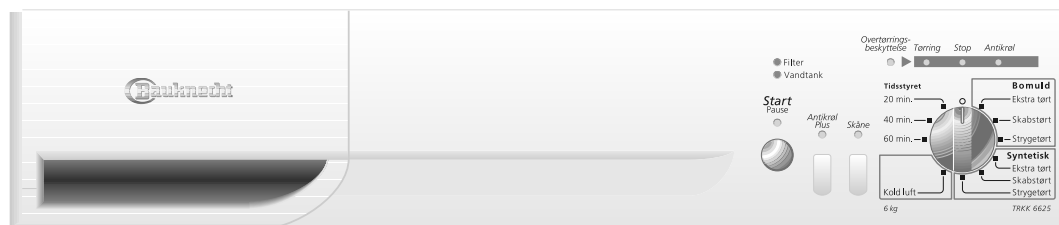

	Very Wet Load	Wet Load	Load	<div><div>↓</div>Fabric programmes &amp; Drying levels</div>		Drying options		<div>Skåne</div> <div>●</div> <div>Gentle Reduces drying intensity (recommended for delicate items)</div>	<div>Antikrøl Plus</div> <div>●</div> <div>Anti-Crease Prevents laundry from creasing up to 12 hours. Buzzer is switched off</div>	<div>Start/Pause</div> <div>Start Pause</div> <div>●</div> <div></div>	<div>Starts the drying cycle. The indicator lamp is blinking during the selection phase. Press to confirm the final selection.</div>
	Indicative drying times (in minutes)		Kg								
Cotton	95'	80'	3.0	Cotton <b>Bomuld</b> Max 6 kg	<div>■</div> Ekstra tørt	Cupboard dry +	<b>Bomuld</b>	<b>Bomuld</b>			
	160'	130'	6.0		<div>■</div> Skabstørt	Cupboard dry *	<b>Bomuld</b>	<b>Bomuld</b>			
	85'	70'	3.0		<div>■</div> Strygetørt	Iron dry*	<b>Bomuld</b>	<b>Bomuld</b>			
	150'	120'	6.0								
	70'	60'	3.0								
	120'	100'	6.0								
Synthetics	50'	40'	1.0	Synthetics <b>Syntetisk</b> Max 2.5 kg	<div>■</div> Ekstra tørt	Cupboard dry +	<b>Syntetisk</b>	<b>Syntetisk</b>			
	70'	50'	2.5		<div>■</div> Skabstørt	Cupboard dry *	<b>Syntetisk</b>	<b>Syntetisk</b>			
	40'	30'	1.0		<div>■</div> Strygetørt	Iron dry	<b>Syntetisk</b>	<b>Syntetisk</b>			
	60'	40'	2.5								
	30'	20'	1.0								
	50'	30'	2.5								
Airing	-	-	-	Airing <div>■</div> Kold luft	Laundry is aired and refreshed for 30 minutes without heating.		-		<div>■</div> Kold luft		
Time	-	-	-	Time <b>Tidsstyret</b> <div>■</div> 20 min. <div>■</div> 40 min. <div>■</div> 60 min.	Completes drying or dries single items (suitable for all fabrics).		-		<div>■</div> 20 min. <div>■</div> 40 min. <div>■</div> 60 min.		

Start/Pause

Start  
Pause

●

Filter

● Filter

Water Container

● Vandtank

Overdry protection

Overtørings-  
beskyttelse

●

PROGRAMME SEQUENCE INDICATORS

Overdry Protection

Tørring Drying

Stop End

Antikrøl Anti-Crease

Lit: Overdry protection is working

Lit: programme is running.

Lit: End of programme.

Lit: Anti-Crease is running.

\* Test programmes according IEC 61121

## PREPARING THE LAUNDRY

1. Check that all fastenings are closed and that pockets are empty.
2. Turn the articles inside out.
3. Place laundry loosely in the drum to make sure it doesn't become tangled.

Sort laundry as follows:

### A) By care symbols (on the collar or inside seam):



Suitable for tumble drying



Tumble drying with reduced drying intensity only. Press Gentle button.



Do not tumble dry

### B) By amount and thickness/weight

Whenever the load to be dried exceeds dryer capacity, separate laundry according to weight (e.g. towels from thin underwear).

### C) By type of fabrics

**Cotton/linen:** Towels, cotton jersey, bed and table linen made of cotton or linen.

**Synthetics/Easy Care:** Blouses, shirts, overalls, etc. made of polyester or polyamide, as well as cotton/synthetic mixes.

### D) By drying level

- Sort into: iron dry, cupboard dry, etc.

**Do not tumble dry:** Woollens, silk, nylon stockings, delicate embroidery, fabrics with metallic decorations, bulky items such as sleeping bags, etc.

**Important: only use specific indicated dryer-safe additives** and rinse items that have been treated with stain remover thoroughly in plenty of water before drying. **Only use specific indicated dryer-safe plastic items** and never dry rubber or articles contaminated with vegetable oil in the dryer.

## SELECTING A PROGRAMME & OPTIONS

Programme and Options:

- To select a programme, turn the programme selector knob to the required position. The start indicator lamp is blinking, indicating that the cycle needs to be started.
- To select an option, press the corresponding button. The indicator light in the button lights up confirming that the selection has been made.
- Press the option button again to cancel the option.

## STARTING & COMPLETING A PROGRAMME

1. Having selected the desired programme and options, press the Start/Pause button.  
As soon as the drying cycle is finished the END indicator lamp is lit and the laundry can be removed.  
If the laundry is not removed at the end of the drying cycle, an automatic anti-crease cycle will operate for maximum 60 min. The drum rotates at regular intervals, preventing the laundry from creasing.  
**Anti-Crease protection re-distributes laundry in the drum.**
2. On completion of the programme, set the programme selector knob to position "0".

## CHANGING A PROGRAMME

When changing the programme during the drying cycle, the dryer stops. The start indicator lamp is blinking.  
To operate the new programme, press the Start/Pause button.

## INTERRUPTING A PROGRAMME

**To interrupt the dryer during operation**

1. Set the programme selector knob to Airing.
2. Press the Start/Pause button.  
Wait at least 5 minutes before opening the door to allow the dryer to cool down. For your safety the programme stops automatically if you open the door.
3. To restart, after door opening, close the door and press the Start/Pause button again.

## DAILY MAINTENANCE & CLEANING

**Clean the lint filter at the end of every drying cycle:**

1. Open the door.
2. Pull the filter upwards.
3. Open the filter.
4. Remove lint using a soft brush or your fingertips.
5. Close the filter.
6. Push the filter back into place.

**Empty the water container at the end of every drying cycle.**

1. Pull the handle to remove the water container.
2. Empty the water container.
3. Replace the water container when empty by pushing it **completely** back in place.

## TROUBLESHOOTING GUIDE

**If a fault occurs, before contacting our After-Sales Service, make the following checks to try and remedy the problem:**

**Drying takes too long / laundry is not dry enough:**

- Was the correct programme selected?
- Was the inserted laundry too wet (Washing machine spin speed less than 800 rpm? When the spinning speed is less than 800 rpm the water container fault may occur during the drying cycle.)?
- Is the lint filter dirty (filter indicator lamp on)?
- Is the heat exchanger dirty? (refer to the Instructions for use)
- Is the ambient temperature too high?

**The dryer does not operate:**

**(after a power failure and/or interruption to the mains supply, always press the Start/Pause button).**

- Is the plug properly inserted into the mains electricity socket?
- Is there a power failure?
- Has the fuse blown?
- Is the door properly closed?
- Has the programme been selected?
- Has the **Start/Pause** button been pressed?

**Lint filter or water container indicator lamp light on:**

- Is the lint filter clean?
- Is the water container empty?
- Is the water container correctly positioned?
- Is the heat exchanger clean?

**Water droplets underneath the dryer:**

- Is the heat exchanger correctly positioned?
- Has any fluff on the heat exchanger seal been wiped away?
- Has any fluff on the door seal been wiped away?
- Has the water container been positioned correctly?

## AFTER-SALES SERVICE

If, after carrying out the above checks the malfunction persists or appears again, turn the dryer off and call our After-Sales Service (refer to guarantee).

Please specify:

- The nature of the fault.
- The dryer type and model.
- The service code (the number after the word Service on the adhesive rating plate) on the right-hand side when the door is open.
- Your full address and phone number.

**SERVICE** 0000 000 00000



**5019 407 00500**